 


DC311XXP2/BS
DC313XXP2/BS

CZ Obsah balení (E) Pakendi sisu (E) Περιεχόμενα
 HU Tartalom (V) Sadržaj (U) Turinys (L) Zawartość
 RO Conținut (SK) Obsah (T) İçindekiler (M) Зміст



x1



x1




x2











CR2032




x1

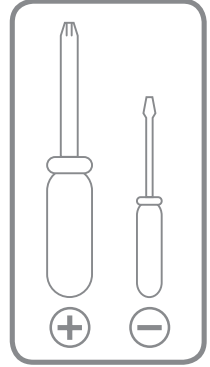


CZ Úvodem (E) Pagaidus (M) Погода, гіпора (M) Kezdő lépések (V) Darba sajkása (U) Darbo pradžia
 (L) Przygotowanie do użycia (M) Notumi de baza (SK) Začínanie (T) Kurulum (M) 3-чоро розмовчати

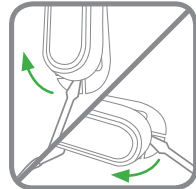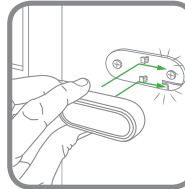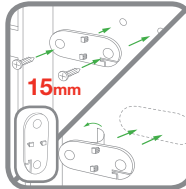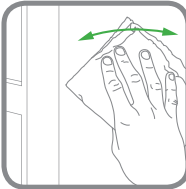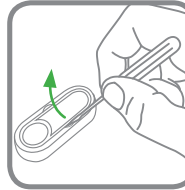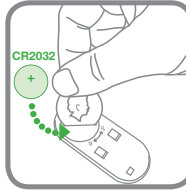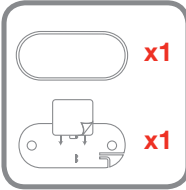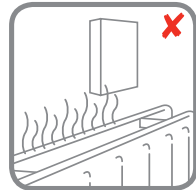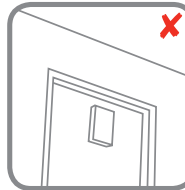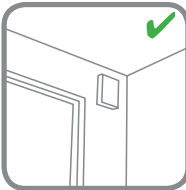




CZ Volitelné funkce **EE** Lisavõimalused **GR** Προαιρετικές λειτουργίες
HU Opcionális funkciók **LV** Papildomas funkcijas **LT** Papildomos funkcijos
PL Funkcje dodatkowe **RO** Caracteristici opționale **SK** Voliteľné funkcie
TR Opsiyonel özellikler **UA** Додаткові можливості

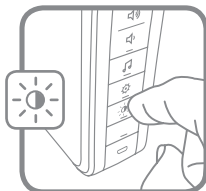

	Hello	Ding Dong	Westminster	Marimba	Piano	Bell	Telephone	Soft Alert
	•	•					•	•
	•	•	•	•			•	•
	•	•	•	•	•	•	•	•

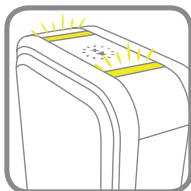

CZ Párování **EE** Sidumine **GR** Ζεύξη **HU** Összehangolás
LV Sasaitisana **LT** Pritiesimas **PL** Nawiązanie połączenia
RO Conectare **SK** Párovanie **TR** Eşleşirme
UA Прив'язування

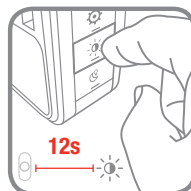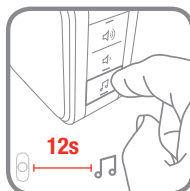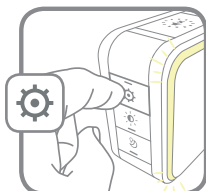

CZ Odstranění poruch **EE** Kui vajad lisa abi **GR** Επίλυση προβλημάτων **HU** Hibakeresés
LV Problēmu novēršana **LT** Gedimo paieška **PL** Usuwanie usterek **RO** Depanare
SK Riešenie problémov **TR** Destek **UA** Пошук та усунення несправностей

livewell.honeywell.com



32313851-001 Rev.A